


MetPrep Preparation Procedure – No 24

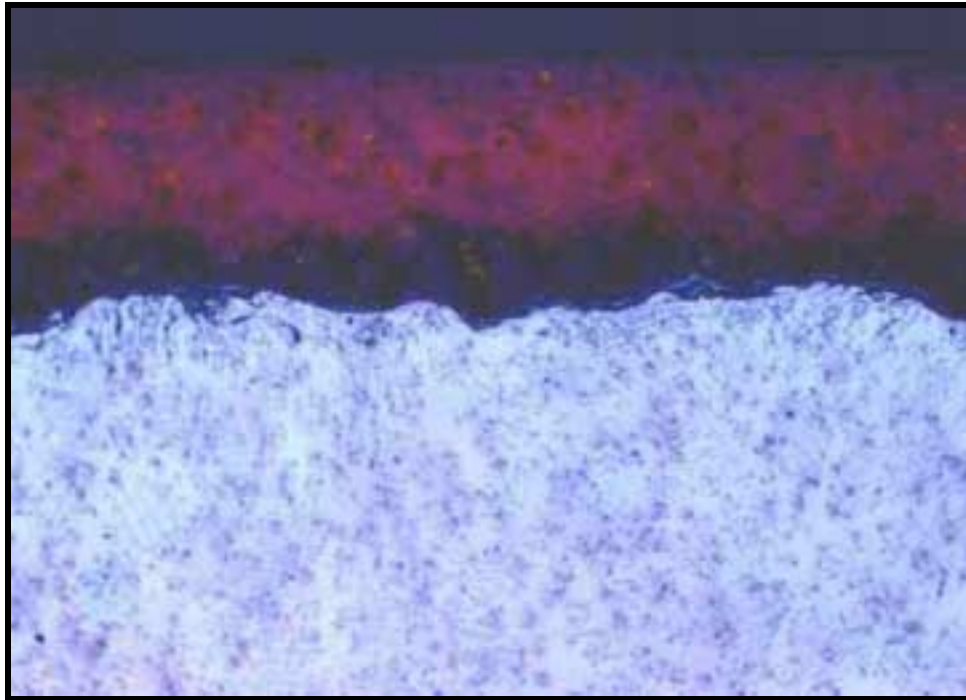

Vitreous Enamel on Grey Cast Iron

	Surface	Abrasive	Pressure		Speed – Dir	Time
Primary Grinding Stage	Paper	P180g SiC	Psi	N	150 – Comp	Until Planar
			5	25		

	Surface	Abrasive	Pressure		Speed – Dir	Time
Additional Grinding Stages	Planocloth H	15 µm (WB) Diamond	Psi	N	250 – Comp	5 mins
			5	25		
	Durasilk	3 µm (WB) Diamond	5	25	250 – Comp	4 mins

	Surface	Abrasive	Pressure		Speed – Dir	Time
Polishing Stage	Chemicloth	0.06µm Silco	Psi	N	100 – Comp	2 mins
			3	15		