


# MetPrep Preparation Procedure – No 145

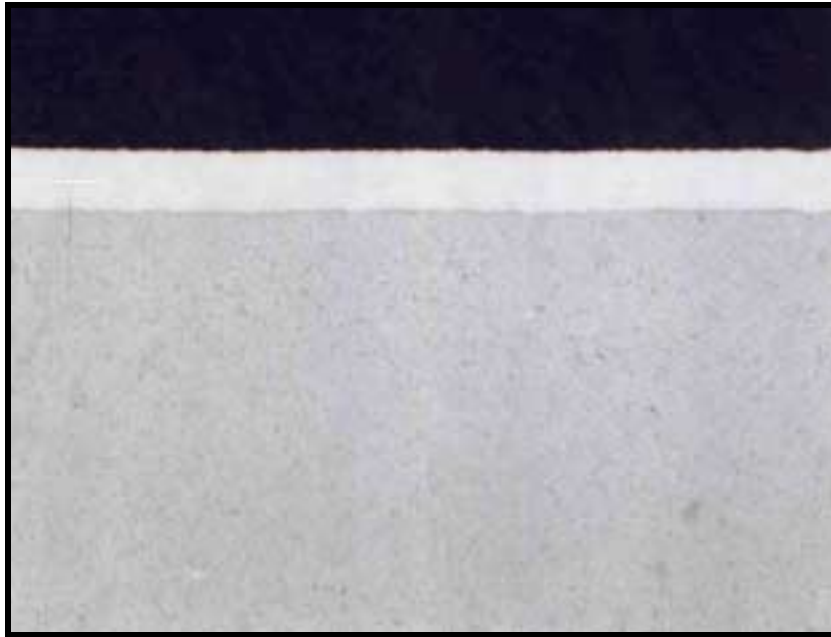

## Nickel coated Tungsten Carbide

	Surface	Abrasive	Pressure		Speed – Dir	Time
Primary Grinding Stage	Fixed Diamond	20 µm MB	Psi	N	500 – Comp	Until Planar
			5	25		

	Surface	Abrasive	Pressure		Speed – Dir	Time
Additional Grinding Stages	Abracloth	9 µm (WB) Diamond	Psi	N	250 – Comp	4 mins
			5	25		
	Planocloth	1 µm (WB) Diamond	5	25	250 – Comp	7 mins

	Surface	Abrasive	Pressure		Speed – Dir	Time
Polishing Stage	Multicloth	0.06 µm Silco	Psi	N	80 – Comp	2 mins
			3	15		